


## STAINLESS STEEL ACCESSORIES FOR STERLING

### SUNVISOR

#### INSTALLATION INSTRUCTIONS

1. Pull back plastic coating from the bolt holes on visor.
2. Remove factory fiberglass visor (keep all hardware).

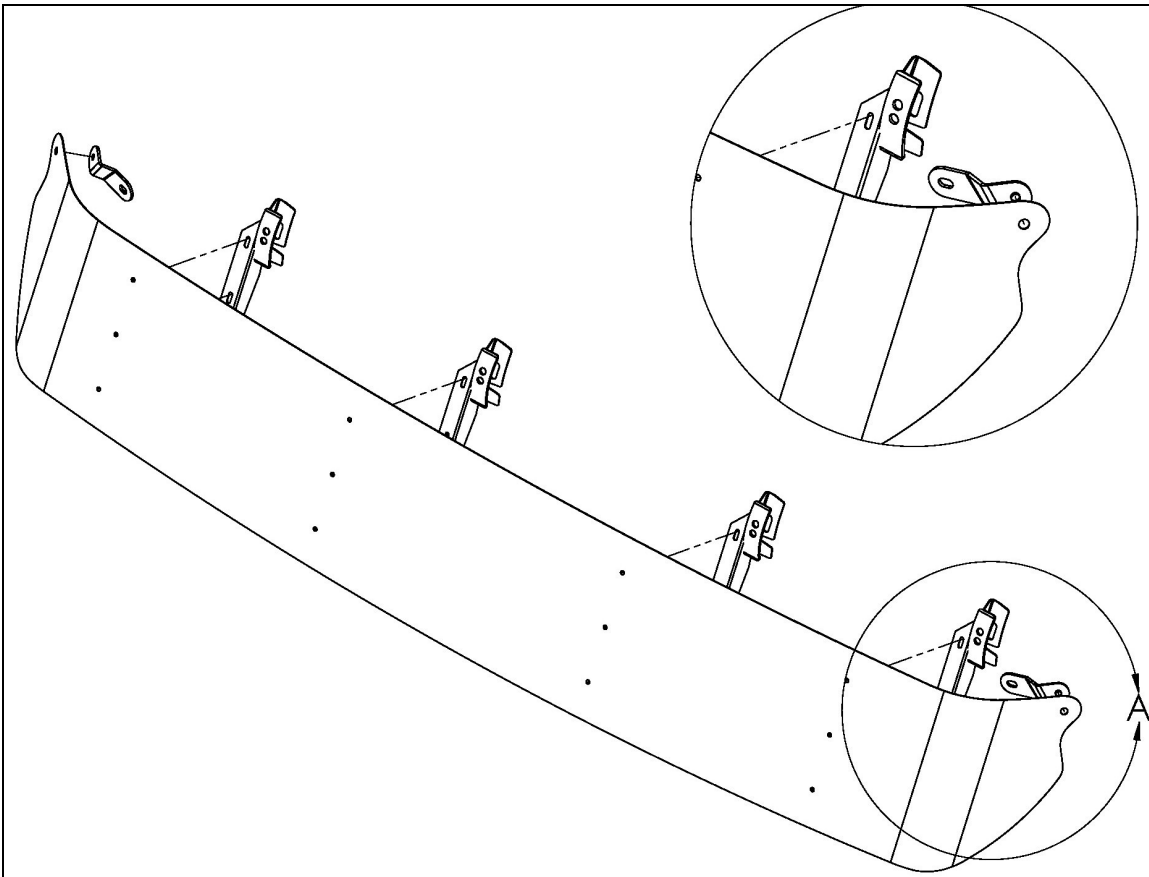

3. Fill bolt holes with silicone and re-install original hardware through new brackets along with “L-shaped” brackets on ends.
4. Do not tighten all hardware until last step, allow brackets to slide freely.
5. Attach Sunvisor to brackets using supplied hardware. (difficult to fasten top row of hardware).
6. Tighten all brackets and hardware (difficult to fasten top row of hardware).
7. Remove remaining plastic coating.