


Stainless Steel Accessories

CHOP TOP-DOOR MOUNTED MIRRORS. WITH OR WITHOUT PASSENGER SIDE, DOWN VIEW MIRROR WESTERN STAR

INSTALLATION INSTRUCTIONS

1. Remove two bolts holding 'Down View Mirror' to passenger side door, if applicable.
2. Remove two bolts that fastens 'Down View Mirror' to stand off bracket and attach to new standoff bracket by reusing fasteners, if applicable.

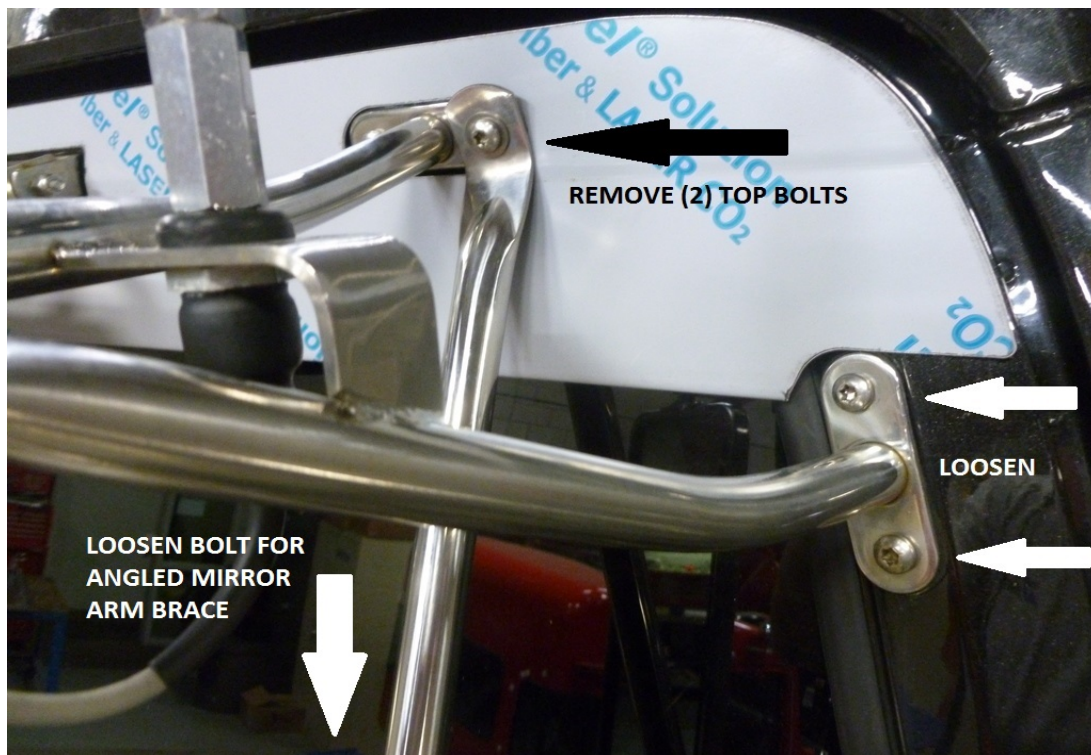

3. It's also recommended to loosen the bolt holding the angled mirror arm brace.
4. Prepare surface of door with supplied alcohol wipes. If there is significant surface dirt, wash area prior to using alcohol wipes.
5. Install Chop Top following instructions for 3M tape supplied.
6. Once Chop Top has been adhered to door, reinstall down view mirror and mirror arm fasteners.
7. Peel the protective plastic and clean with glass cleaner, if necessary